

## How to Set Up Your URC2002-P Universal Remote Control

If you have a URC2002-P universal remote control, you can use it to operate various devices such as TV, VCR, cable, satellite, and AUX. This remote control can work with most major brands and has easy set up instructions. Here are some steps to help you set up your URC2002-P universal remote control.

1. Find the device code for the device you want to control. You can refer to the device code list that comes with the remote control or search online for the code. For example, if you want to control a Samsung TV, you can search for "KodoviZaPilotSupertelUrc2002p Samsung TV" and find the code 006 or 007[^1^].
2. Press and hold the [SET] key and then press the device key that corresponds to the device you want to control, such as [TV1], [VCR1], or [AUX]. The LED will turn on. Release both keys.
3. Enter the 3-digit device code using the number keys. If the code is correct, the LED will turn off. If the code is incorrect, the LED will blink twice and stay on. In that case, try another code for the same device.
4. Test if the remote control works by pressing some keys such as [POWER], [CH+/-], or [VOL+/-]. If most keys work properly, you have successfully set up your remote control. If not, repeat steps 1-3 with another code for the same device.
5. Repeat steps 1-4 for each device you want to control with your remote control.

If you cannot find the device code for your device or if none of the codes work, you can use the quick search function to find out the correct code. Here are some steps to use the quick search function:

1. Turn on the device you want to control. If it is a VCR, insert a tape.
2. Press and hold the [SET] key and then press the device key that corresponds to the device you want to control, such as [TV1], [VCR1], or [AUX]. The LED will turn on. Release both keys.
3. Press and release the [SET] key again. The LED will start flashing. The remote control has entered into quick search mode.
4. Point the remote control at the device and press [POWER] key. If it is a VCR or AUX, you can press either [POWER] key or [PLAY] key. See if the device works or not (power off or play). If the device works, go to step 5. If not, repeat step 4.
5. Check if other keys such as [CH+/-], [VOL+/-], or [MENU] work properly. If they do, you have found out the correct code. If not, repeat steps 4-5 until you find a code that works well enough.

You can also change the search direction from forward to backward or vice versa by pressing [REV] key during quick search mode. We hope this article helps you set up your URC2002-P universal remote control easily and enjoy using it with your devices. If you want to change the device bank of your remote control, you can do so by following these steps:

1. Press and hold the [SET] key and then press the device key that you want to change, such as [TV1], [VCR1], or [AUX]. The LED will turn on. Release both keys.
2. Press and release the [SET] key again. The LED will start flashing.
3. Press the device key that you want to switch to, such as [TV2], [VCR2], or [SAT/CABLE]. The LED will turn off. You have successfully changed the device bank.

For example, if you want to change [TV1] to [TV2], you can press and hold [SET] + [TV1], then press and release [SET], then press [TV2]. If you want to reset your remote control to its factory settings, you can do so by following these steps:

1. Press and hold the [SET] key and then press the [POWER] key. The LED will turn on. Release both keys.
2. Press and release the [SET] key again. The LED will start flashing.
3. Press and hold the [SET] key and then press the [POWER] key again. The LED will turn off. You have successfully reset your remote control.

Note that this will erase all the device codes and settings that you have programmed into your remote control.





